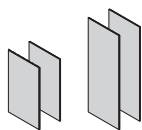


SCHEMA DI MONTAGGIO/assembly scheme

FIANCHI FINALI E TOPS DI FINITURA

final side panels and finishing tops
ART. 188-189-190
ART. 180-182-183-184-185-186


CODICE code	777 700 496
DISEGNO drawing	SM 18008
DATA date	20-04-2007
PAGINA page	1/1
INDICE DI REVISIONE N° last revision no	1
DATA REVISIONE last date	23/02/2015


ART. 188 ART. 189

CODE	Ø x L	COLOUR
506912509	4MA x 25	ZINCATO
4MA x 1" - Zinc Plated		
TSPX/PH	L	A x 8


ART. 190

CODE	Ø x L	COLOUR
506912509	4MA x 25	ZINCATO
4MA x 1" - Zinc Plated		
TSPX/PH	L	A x 12

**N.B. PER IL MONTAGGIO
SEGUIRE LE FASI NUMERATE**
assemble following the numbered phases

- 1** SFONDARE LE PREFORATURE SUI FIANCHI DEI MOBILI COME DA SCHEMA
to break the bottom of the perforations on side cabinets as scheme
- 2** FISSARE I FIANCHI FINALI CON LE VITI IN DOTAZIONE
to fix the final side panels with the screws in equipment
- 3** POSIZIONARE IL TOP E FISSARE CON LE VITI IN DOTAZIONE
to put the top and to fix with the screws in equipment

CODE	Ø x L	COLOUR
506940909	3,5 x 25	ZINCATO
1/8" x 1" - Zinc Plated		
TSPX-PZ	L	B

